


Panasonic®

Operating Instructions

FM/AM DIGITAL CLOCK RADIO


MODEL NO. RC-6010

Read these instructions completely before operating this set.

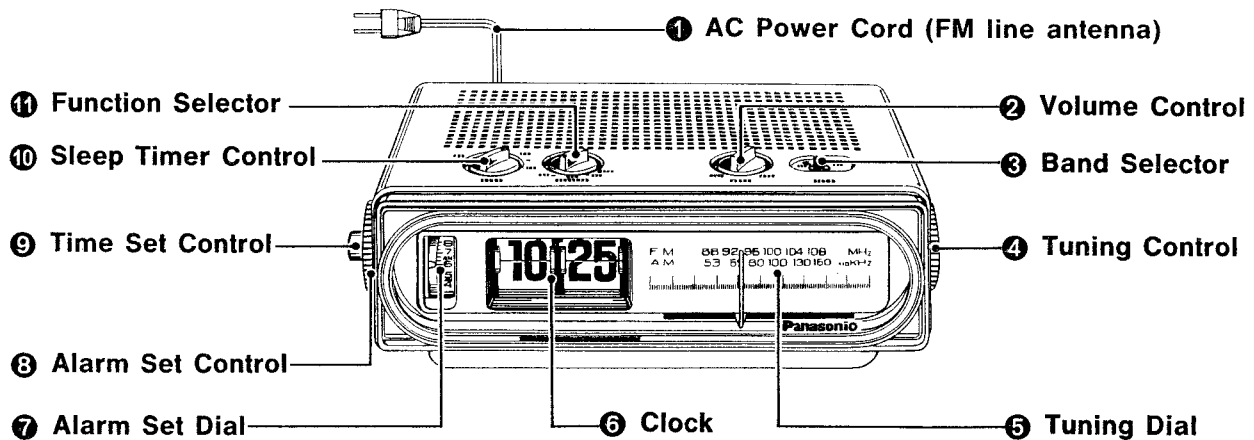

ELECTRIC CLOCK

- Plug the AC Power Cord 1 into a household AC outlet (60 Hz, 120 V). Do not attempt to connect your unit to any DC power supply because damage to the unit will result.
- Turn the Time Set Control 9 clockwise to set the correct time on the Clock 6. As this clock has a 24-hour mechanism, be sure to set AM or PM correctly.

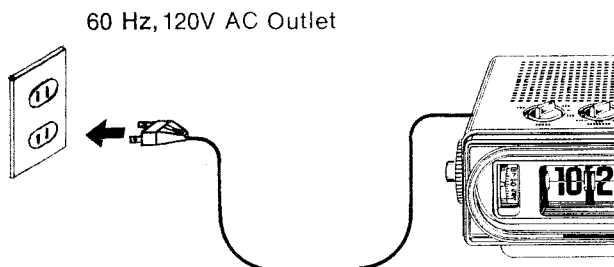

RADIO OPERATION

- Turn the Function Selector 11 to "ON".
- Adjust the sound with the Volume Control 2.
- Choose FM or AM with the Band Selector 3.
- Tune in your favorite station on FM or AM, with the Tuning Control 4.
- To turn the radio off, set the Function Selector 11 to "OFF", and be sure the Sleep Timer Control 10 is set to 0.

Antenna:

- To improve AM reception, turn the unit in the direction which gives the best results since the built-in ferrite-core AM antenna is somewhat directional.
- For optimum FM reception, extend the AC Power Cord 1, which functions as an FM antenna, and change its direction until the best results are obtained.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

OPERATION AS A RADIO OR BUZZER ALARM

The radio or buzzer alarm can be set to any desired wake-up time.

Radio Alarm:

- Set the Function Selector ⑪ to "ON".
- Preset the radio to your desired station, and adjust the volume.
- Turn the Alarm Set Control ③ counterclockwise to set your desired wake-up time on the Alarm Set Dial ⑦. Be sure the AM/PM setting is correct.
- Change the Function Selector ⑪ to "AUTO".

Buzzer Alarm:

- Set the desired wake-up time as above but turn the Function Selector ⑪ to "ALARM".
- A buzzer alarm will awaken you at the preset time.

Note: * The radio or buzzer alarm will shut off automatically in about 2-3 hours.

- * If the Function Selector ⑪ is kept at "AUTO" or "ALARM", the radio or buzzer alarm will operate at the same time each day.
- * To shut off the radio or buzzer alarm before its normal 2-3 hour cycle, turn the Function Selector ⑪ to "OFF".
- * When the Alarm Set Control ③ stops while you are rotating it clockwise, do not turn any further by force but rotate counterclockwise.

OPERATION AS A GO-TO-SLEEP RADIO

You can set the clock radio to play up to 120 minutes (2 hours) and then shut off automatically.

- Be sure the Function Selector ⑪ is set at a position other than "ON".
- Rotate the Sleep Timer Control ⑩ fully-counterclockwise, then set it to any point between 0 and 120.

Note: The Sleep Timer Control ⑩ has no effect when the buzzer alarm is operating.

OPERATION IN COMBINATION, GO-TO-SLEEP AND ALARM

You can set the clock radio to play for the desired time (up to 120 minutes) and shut off automatically, then activate the radio or buzzer alarm automatically at the desired wake-up time.

- Set up the clock radio as in section "OPERATION AS A RADIO OR BUZZER ALARM".
- Preset the Sleep Timer Control ⑩ to the desired time between 0 and 120 minutes.

PRECAUTIONS

For your safety and to prevent damage to the set:

- Do not connect the set to an AC outlet other than regular 120 volts, AC 60 Hz.
- Avoid cuts, scratches, or poor connections in the AC power cord which may result in possible fire or electric shock hazard. Also, excessive bending, pulling, or slicing of the cord should be avoided.
- Do not unplug the AC power cord by pulling on the cord.

HELPFUL HINTS

- Keep the set away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.
- The set should be kept free from dust, moisture, and vibration, and should not be exposed to direct sunlight.
- Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened with a mild soap and water solution.

PRODUCT SERVICE

Should your Panasonic product ever require service, refer to an Authorized Panasonic Service Center in the enclosed Directory, or consult your authorized Panasonic dealer for detailed instructions.

SERIAL NUMBER: Located on the label affixed to the bottom of the set.

Panasonic Company
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094

Matsushita Electric of Hawaii, Inc.
320 Waiakamilo Road, Honolulu, Hawaii 96817